

## ZTE Blade V6

**Model: ZTE T660**

## Quick Start Guide

See [ztemobiles.com.au](http://ztemobiles.com.au) for more help

Follow ZTE Australia on Facebook, Google+ Twitter and Instagram



Find us on  
Facebook



### LEGAL INFORMATION

Copyright © 2015 ZTE CORPORATION.

**All rights reserved.**

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

#### Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Google and Android are trademarks of Google, Inc.



The *Bluetooth*<sup>®</sup> trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.



microSDHC Logo is a trademark of SD-3C, LLC.

Other trademarks and trade names are the property of their respective owners.
  
## Getting to Know Your Phone

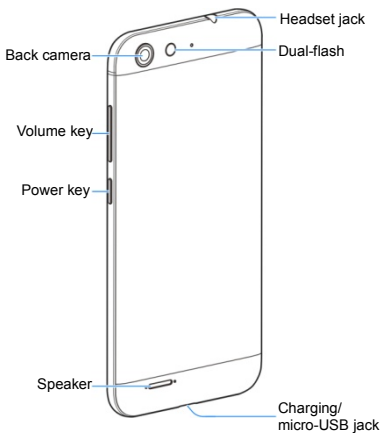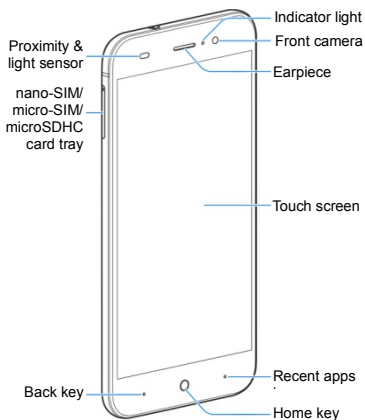

Key	Function
Power key	<ul style="list-style-type: none"> <li>• Press and hold to power your device on or off, enable flight mode, or restart.</li> <li>• Press to turn the display on or off.</li> <li>• Press and hold for 10 seconds to restart your device.</li> </ul>
Home key	<ul style="list-style-type: none"> <li>• Touch to return to the home screen.</li> <li>• Touch and hold to use Google Search.</li> </ul>
Back key	<ul style="list-style-type: none"> <li>• Touch to go to the previous screen.</li> </ul>
Recent apps	<ul style="list-style-type: none"> <li>• Touch to see recently used applications.</li> </ul>
Volume keys	<ul style="list-style-type: none"> <li>• Press or hold to turn the volume up or down and manage interruptions</li> <li>• Adjust the in call volume during a call</li> <li>• Adjust media volume for games and media</li> </ul>



#### **NOTE:**

The positions of the **Back** key and the **Recent apps** key are interchangeable through **Settings > Hard Key**.

## **Installing the nano-SIM Card/micro-SIM Card/microSDHC™ Card**

Your phone has a card tray with two card slots. You can install a nano-SIM card or a microSDHC card (not included in the packaging) into the card slot 1, and install a micro-SIM card into the card slot 2.

The nano-SIM card, the micro-SIM card and the microSDHC card can be installed or removed while the phone is turned on. You need to unmount the microSDHC card before removing it.



 
#### **WARNING!**

To avoid damage to the phone, do not use any other kind of SIM cards, or any non-standard nano-SIM card/micro-SIM card cut from a SIM card. You can get a standard nano-SIM card/micro-SIM card from your service provider.

**NOTE:**

Your phone is designed for simultaneous use of two SIM cards (one nano-SIM card and one micro-SIM card) in standby mode. However, the two cards cannot be used simultaneously for calls or the Internet. If one card is used in a voice call, the other card is not available.


1. Insert the tip of the eject tool into the hole on the card tray.

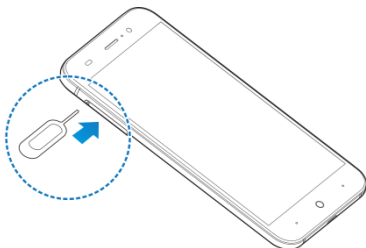

2. Pull out the tray and follow the instructions below.

**To install the nano-SIM card or the microSDHC card:**

 
Put the nano-SIM card or the microSDHC card with the cut corner oriented as shown on the card slot 1.

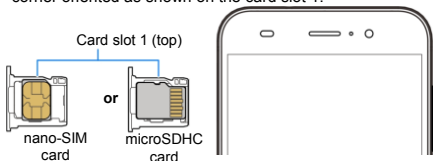**NOTE:**

If you choose to install a microSDHC card, it is not recommended to remove or replace it randomly, as some applications may require the microSDHC card to work normally or may store certain data on it.

### To install the micro-SIM card:

 Hold the micro-SIM card with the cut corner oriented as shown and slip it into the card slot 2. The card slot 2 is on the back side of the card tray.

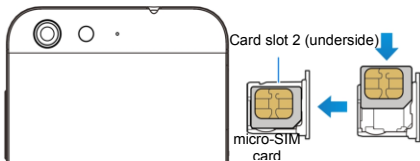

#### NOTE:

The card slot 1 supports GSM networks, while the card slot 2 supports LTE/WCDMA/GSM networks.

3. Carefully insert the card tray into the handset and push home. If it does not push in check the SIM cards are flush in the slot.

## Charging the Battery

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.



#### WARNING!

 
Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.



#### CAUTION:

Do not change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorized service provider.

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted in the correct direction.
2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.
4. Be careful not to pull harshly or trip up on the lead while charging. This can damage the lead or the socket on your device. Physical damage is not covered by your warranty.

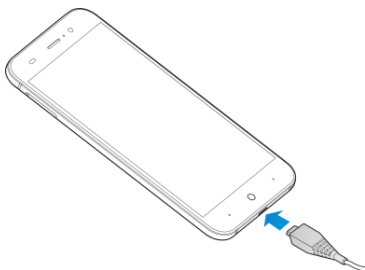


#### **NOTE:**

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 20 minutes. Press and hold the power key for 10 seconds to restart your device. Contact the customer service if you still cannot power on the phone after prolonged charging or 10 second restart.

#### **Power Your Phone On or Off**

- Hold the **Power Key** to switch on your phone.
- To switch it off, hold the **Power Key** to view the options. Touch **Power off**, and then touch **OK**.

#### **Wake Up Your Phone**

1. Press the **Power Key** to activate your screen display.
2. Press and hold the lock icon  to unlock the screen.

**NOTE:** If you have set an 'unlock pattern', or a PIN/password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock your screen.

#### **Restarting Your Phone**

If the screen freezes or takes too long to respond, hold the power key for 10 seconds to restart your device.

#### **First time power up, Google Account**

It is recommended that you create or log in with a Google account. Creating an account gives you access to the Google Play Store to update, download and manage your applications, and can protect your account by backing up Contacts and other data. If you lock your device and forget your unlock code (PIN or pattern) then you can unlock the device using your

Google account password.

Follow the steps in the first time wizard to set up or log into a Google account.

### **Factory Reset if you have forgotten your PIN, password or unlock pattern**

Press the Emergency Call button on any locked screen to open the dialler. Enter \*983\*987# to reset

### **How to get to Settings**



There are a few ways to get to the Settings menu:

1. Go to Apps > Settings



2. Pull down the Notifications panel twice and press >








From Settings you can customise all your phone settings to suit your needs.

### **Using the Touch Screen**







You can use the touch screen in various ways:

- Touch text entry fields to bring up the keyboard. Touch buttons, or icons to use them
- Touch and Hold. A long press on some icons brings up further options. In Messaging, press and hold a message to Forward.
- Swipe horizontally or vertically on screens to move between screens.
- Drag, press and hold on an icon to move it on the screen. Release at the target position.
- Pinch Zoom, on the Camera, Maps, Browser and Gallery you can zoom in and out by placing two fingers on the screen at once and pinching together or spreading apart.
- Auto rotation when enabled will automatically rotate from portrait to landscape.

## Making Calls







1. Touch Home Key >  > 
2. Enter the phone number using the keypad. Touch  to delete wrong digits.
3. Press Options  to add a Pause or Wait if required
4. Press and hold the 0 key to enter the plus (+) symbol for international dialling.
5. Touch the Phone icon  below the keypad to dial.

## Options during a call

- Press  to open the number pad
- Press  to use loudspeaker (Handsfree) mode
- Press  to mute the microphone
- Press  to put the current call on hold
- Press  to dial in another party (Conference)
- Press  to End the call

## When you receive a phone call

The display shows the caller ID and any additional information about the caller saved in Contacts. Press **Answer** or **Reject** or

- swipe  right to  to answer the call,
- swipe  left to  to reject the call,
- swipe  up to  to reject the call and send an SMS which is displayed on screen.

Set this at Dialler > Options > Settings > Other Settings > Quick responses

**TIP:** You can silence the incoming ring by pressing either of the Volume keys.

## Adjusting Volumes


The side volume keys work in three different ways:

1. When you are on a call use the volume keys to adjust the in call volume.
2. When you are using a media application, such as music, video or games, the volume keys adjust the media volume.



3. At other times when you are not in either of the above states, the volume keys set the ringtone volume or enable vibrate mode at minimum volume.

### Enable Silent or Vibrate mode

Go to Apps > Settings > Sound and notification >  Vibrate to enable Vibrate on Ring.

### Access the Quick Settings Panel

Swipe down twice from the top of the screen. Tap to enable or disable features. Touch Wi-Fi and Bluetooth for additional settings (indicated by the line under the icon).

### Connect to a local Wi-Fi network



1. Touch Home > Apps > Settings > Wi-Fi, switch to On.
2. Tap Wi-Fi to view available networks.
3. Touch a network name to connect to it.

Previously connected networks will connect automatically. If the network is secured enter the password.


### Messaging

You can use **Messaging** to exchange text messages (SMS) and multimedia messages (MMS).


### Open the Messaging Screen

Touch  in the Home Screen or from Apps 

The **Messaging** screen opens, where you can create a new message, search for messages, or open an ongoing message thread.

1. Touch the write icon to write a new message.
2. Touch  to search within messages
3. Touch an existing message to open the thread.

### Send a Text Message

On the **Messaging** screen, touch the write icon  at the top of the screen to create a new message.


Enter the recipient's number or, if the recipient is stored in Contacts enter the first letters of their name. As matching contacts appear, you can touch a suggested recipient.

Touch the Type text message field, and enter your message using the keypad.

Touch  to Send.

## Reply to a Message

Messages you receive are appended to existing threads of the same number. A new thread is created for new numbers.

1. On the **Messaging** screen, touch the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can touch the attach icon **+** if you want to reply with an MMS.
3. Touch  to Send.


## View Message Details

1. Touch and hold a message in a thread.
2. Touch **View message details** to see the message type, sender or receiver, time and date .

## Send a Multimedia Message

On the **Messaging** screen, touch the write icon at the top of the screen to create a new message.

Enter the recipient and the text of the message, as you do when sending a text message.

Touch the  icon to add an attachment:


<b>Capture picture</b>	Take a photo and add to your message.
<b>Capture video</b>	Shoot a video clip and add to your message.
<b>Record audio</b>	Record an audio file and add to your message.
<b>Contact</b>	Select a contact to add to your message as an attachment.
<b>Pictures</b>	Select a picture to add to your message.
<b>Videos</b>	Select a video clip to attach to your message.
<b>Audio</b>	Select an audio file to add to your message.
<b>Calendar</b>	Add a Calendar event such as an appointment or meeting (VCS).
<b>Slideshow</b>	Add a series of pictures

Touch  to Send.

**TIPS:** The maximum MMS size is 300KB. Large images are automatically re-sized but video files may be too large to send. Send large Video files by email instead or share using Social Media.

## Forward a Message


In **Messaging** touch the thread to open the SMS.

1. Touch and hold the message.
2. Touch **Forward** in the menu that opens.
3. Enter a recipient for the message and edit the content if you want.
4. Touch  to Send.

#### **Delete messages:**

1. On the **Messaging** screen, long press on a message.
2. Touch Delete.

#### **Delete message threads:**

1. On the **Messaging** screen, touch and hold the thread to delete.
2. If there are more threads you want to delete, touch them one by one.
3. Touch  at the top
4. Touch **Delete** to confirm

#### **Message Settings**

Touch  > **Settings** in the **Messaging** screen to change **Messaging** settings.

#### **Enable Group MMS**

Go to Message Settings (see above) > Multimedia and check Group messaging. All multi party SMS will be converted to MMS. Recipients can use Reply All to reply to the whole group. MMS requires the sender and receiver to have an active data account. Users without data will not receive the MMS.


#### **Open/Close the Notification Panel**

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your phone as a Wi-Fi hotspot. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down from the top of the screen.
- To close the notification panel, swipe your finger up from the bottom of the screen or touch the Back Key.

## Respond to or Remove a Notification

In the notification panel, you can respond to a notification or remove the notifications.

- To respond to a notification, just touch it.
- To remove a notification, swipe it sideways.
- To dismiss all notifications touch  at the bottom
- Most apps that send notifications, such as Gmail and Hangouts, have notification settings that you can adjust.

## Opening apps

Touch Home Key > Apps  to open the Apps menu. Slide left or right to view more.

















## Place Apps and Widgets on the Home Screen


Touch and hold an App icon from the Apps menu to copy it to your home screen. Drag the icon and release at the required destination on your home screen.

Touch Widgets at the top of the screen to add various Widgets to your home screen. Touch and hold the Widget and drag to the required destination on your home screen.

## Phone Status Icons



















The phone status icons are shown in the top right portion of the notifications panel:

 	EDGE network		No Signal, No SIM card
	3G network		Signal strength (no data)
	4G Network		Signal strength (with data)
	Flight mode		Ringer off
	Emergency calls only		Microphone off (muted)
	Battery flat		Vibrate on
	Battery low		Speaker on
	Battery partially drained		Connected to a Wi-Fi network










	Battery full		Wi-Fi data in use
	Battery charging		Headset connected
	Bluetooth on		Location services are on

## Notification Icons

The notification icons are shown in the top left portion of the notifications panel:

	New SMS		microSD card not mounted
	New MMS		microSD card removed
	New Email		Upcoming event
	New Gmail message		Call on hold
	New Hangouts message		Song is playing
	Problem with SMS/MMS delivery		Downloading data
	Missed call		Uploading data
	Call in progress		USB tethering is on
	USB connected		Updates available

## Safety and Warning Notices

	Don't make or receive handheld calls while driving. Never text while driving.
	For body-worn operation maintain a separation of 15 mm.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.
	Turn off when asked to in hospitals and medical facilities.
	Turn off when told to in aircrafts and airports.
	Turn off when near explosive materials or liquids.
	Don't use at petrol stations.
	Your phone may produce bright or flashing lights.
	Don't dispose of your phone in fire.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Do not attempt to disassemble your phone.
	Only use approved accessories.
	Don't rely on your phone as a primary device for emergency communications.

## **Transfer files to a Computer**

Connecting to a computer enables you to transfer music, pictures and other files to and from your handset. There are various ways to do this.

1. Connect using a USB lead. Select MTP on the handset to browse the handset folders on your PC.
2. Use Google Drive to share files in the cloud
3. Connect via Bluetooth to share files with other devices.

See the full User Guide available on line at [www.ztemobiles.com.au](http://www.ztemobiles.com.au) for more details.

**MAC users need to download the File Transfer app from Android onto your MAC device.**

## **Battery Warnings**

Do not disassemble the case. Do not disassemble or short circuit the battery terminals.

Do not dispose of the unit or battery in a fire, the internal battery may explode.

## **Declaration of Conformity (SAR)**

We declare that the product(s) detailed in this manual, and in combination with our accessories, conform with the essential requirements of The Radio Communications Standard (Electro-magnetic Radiation Human Exposure) 2003 and the Australian Communications and Media Authority Section 376 of the Telecommunications Act 1997.

