 


# ZTE Blade V Quick Start Guide



 
ZTE Australia is on Facebook , Google+, Twitter and Instagram

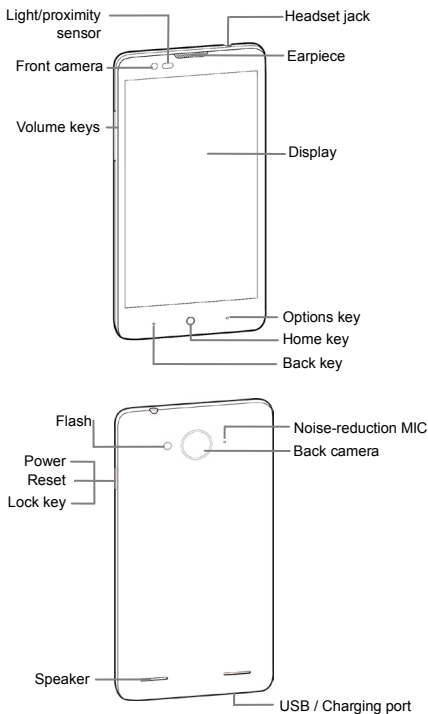

## Insert your SIM card

Insert a valid micro-SIM into your phone before use.

1. Open the back cover.
2. Insert the SIM card into the socket.
3. This device supports micro-SIM card only.

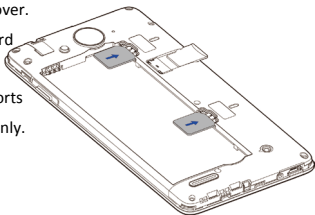

### Important Notes:

 
1. Card slot 1 supports both 3G and 2G networks. Slot 2 only supports 2G networks (GSM)
2. Two SIM cards cannot support 3G network at the same time. When one SIM card supports 3G network, the other SIM card supports GSM network only.
3. Only one card supports data service. When one card is used for data service, the other card cannot be used for data.

A micro-SIM card is a small SIM card also know as 3FF format.





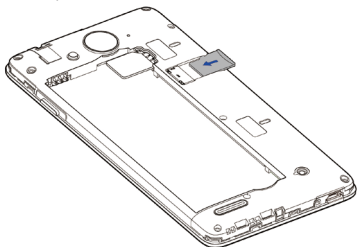


Do not use a nano SIM or SIM card adaptor which may damage your device.

## Add a Memory card (optional)

Insert the memory card into the card slot as shown.



## Key Functions

Keys	Function
Power Key	Hold down to power on your phone. Press to switch to sleep mode. Press to wake up. Hold down for Silent mode, Airplane mode or Power off.
Back 	Press to go to the previous screen. Press to exit applications.
Home 	Press to return to the Home Screen from any screen. Hold down to access Google Now
Options 	Get options on the current screen. Hold down to see the recently used applications.
Volume Keys	Use to control the volume Up and Down, Vibrate and Silent mode, Media and Earpiece Volumes.
	Phone icon – Open the dialler for Calls
	Contacts – Access your Phonebook Contacts
	Messages – Messages app, for SMS and MMS
	Apps – Open the Applications menu

## Switch your device On or Off

- Press and hold the **Power Key** to turn on your phone.
- If your screen is locked, long press on the screen to unlock your phone.
- To turn it off, press and hold the **Power Key** to open the options menu.
- Touch **Power off** and then touch **OK**.



## Charge your Battery

Insert the charger lead carefully.

Ensure the plug is inserted with the correct orientation.

Do not force the connector into the charger jack.

Disconnect the charger when fully charged.

When the phone is on the charging icon /  is shown on the status bar.

### How much charge have you got?

If the battery is low, there will be a pop-up message on the screen. During charging the charge level is shown on the lock screen.

**TIP:** You can also show the charge level on the top bar. Go to Settings > Battery and check the Percentage box.

## Volume Controls

From the Home screen, the volume keys control the Ring volume, Vibrate and Silent. From within a game or media app the volume keys control the media volume. If you are on a Call the volume keys control the in call (earpiece) volume.

## Setting Up for the First Time

When you first power on your phone or after a factory reset you need to enter some settings before use.

1. Touch the Arrow to begin and step through the wizard selecting your personal preferences. Note that selecting Backup and Restore options will consume data.
2. Further assistance is given in the form of pop ups describing how to use various features. Press OK to clear these notices.

## Connect to a Wi-Fi Network

 
Use a local Wi-Fi network to download data instead of using your network data.

Go to Settings > Wi-Fi, switch On and then touch a network to join.

If the network is secured you need to know the password.

Wi-Fi passwords are case sensitive so enter exactly as it is written.

## The Home Screen

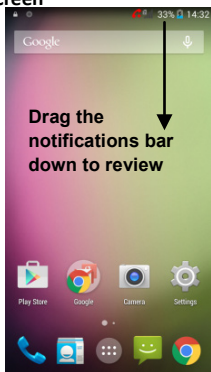

Phone Contacts Apps Messages Chrome

## Settings




















Touch the Settings icon on the homescreen or

Touch the right Options key ● then press Settings

## Screen Locks

You can secure your handset with a variety of different screen locks. Go to Settings > Security > Screen Lock to set a Pattern, PIN or Password to lock your front screen.

## Phone Status Icons


G	GPRS network		No Signal
E	EDGE network		Signal strength (no data)
3G	3G network		Signal strength (data ready)
H	HSDPA network		Mobile data in use
	Flight mode		Ringer off
	Emergency calls only		Microphone off (muted)
	Battery flat		Vibrate on
	Battery low		Speaker on
	Battery partially drained		Connected to Wi-Fi network
	Battery full		Wi-Fi data in use
	Battery charging		Headset connected
	Bluetooth on		

## Access the Quick Settings Panel























Swipe down from the top of the screen and touch the Quick Setting icon. Tap to enable or disable the features. Some icons can be configured with a long press (press and hold).






## Change your Ringtone and other Audio Settings

Press Settings > Audio Profiles >  > Phone Ringtone, Default Notification sound, Vibrate mode etc.







## Notification Icons

	New SMS		microSD card not mounted
	New MMS		microSD card removed
	New Email		Upcoming event
	New Gmail message		Call on hold
	New Hangouts message		New Wi-Fi network detected
	SMS or MMS issue		Downloading data
	Missed call		Uploading data
	Call in progress		USB tethering is on
	USB connected		Wi-Fi hotspot is on
	Song is playing		GPS is on
	Updates available		Bluetooth is on

## Making Calls







1. Touch Home Key >  > Touch  to open the Dial pad.
2. Enter the phone number using the dial pad. Touch  to delete wrong digits.
3. Press Options  to add a Pause or Wait if required
4. Press and hold the 0 key to enter the plus (+) symbol for international dialling.
5. Touch the Phone icon  below the keypad to dial.

## Options during a call

- Press  to open the number pad
- Press  to use loudspeaker (Handsfree) mode
- Press  to mute the microphone
- Press  to put the current call on hold
- Press  to dial in another party (Conference)
- Press  to End the call

## When you receive a phone call

The display shows the caller ID and any additional information about the caller saved in Contacts.

- swipe  right to  to answer the call,
- swipe  left to  to reject the call,
- swipe  up to  to reject the call and send an SMS which is displayed on screen.

Set this at Dialler > Options > Settings > Other Settings >

Quick responses

**TIP:** You can silence the incoming ring by pressing either of the Volume keys.

## More Help

Get online support at [ztemobiles.com.au](http://ztemobiles.com.au) or connect with us via social media, ZTE Australia.