



**MF920A**

**4G WI-FI HOTSPOT**

**GETTING STARTED GUIDE**



Secondary antenna    USB and charging port    Main antenna




Battery indicator  
Wi-Fi indicator  
Message indicator  
Network signal indicator

SIM tray and  
Reset button    WPS button    Power On / Off



# INSERT YOUR SIM CARD

1. Open the SIM slot to insert the SIM card.
2. Insert your SIM card into the SIM slot and click in:

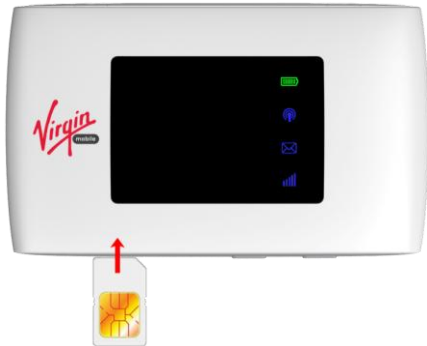

## IMPORTANT NOTES

This device supports a standard SIM card, also called 2FF size. Do not insert a micro SIM (3FF) or use a SIM card adaptor. Using the wrong SIM card or adaptors can damage your device. Physical damage to the SIM slot is not covered by warranty and will make your device unusable.

## POWER UP YOUR 4G WI-FI HOTSPOT

Press and hold the Power key for 3-4 seconds until the lights flash. The hotspot will be available after about 20 seconds.


















**Note:** If you insert the charger with the device off, or the battery is flat, you can only power up the device after about 20 seconds when the start up sequence is complete.

## CONNECT DEVICES BY WI-FI

Your 4G Wi-Fi hotspot can connect up to ten devices via Wi-Fi providing internet access for all your devices on the go.

- On the devices you wish to connect make sure Wi-Fi is switched on, then search for Wi-Fi devices.
- Select the device showing Virgin Mobile 4G\_xxxxxx
- Consult your SSID sticker on the device (spare in the box) and enter the default Wi-Fi key which is case sensitive.
- If you lose your Wi-Fi password then connect via USB and open the web interface to find out your Wi-Fi password.

# LED INDICATORS

	 	On, battery is low (<23%). Flashing, battery is discharged, (< 12 %).
	 	On, battery is OK (>23 %). Flashing, battery is charging.
	 	Solid, Wi-Fi is On. Flashing, WPS is enabled, available for 2 minutes.
		Not registered on the network. No SIM, invalid SIM, PIN or PUK locked.
	 	On, device is registered on 2G/3G, Flashing, device is connected to 2G/3G.
	 	Device is registered on 4G Flashing, device is connected to 4G

**Note:** During periods of inactivity it is normal for the LED's to go out to preserve battery life. Press the power key briefly to check the device status if required.

**Connection example for Windows 7 computer:**

1. On your task bar, next to the clock, click on the Network Interface icon.
2. Click on the Wireless device Virgin Mobile 4G\_xxxxxx
3. The password is the WiFi Key shown on your SSID sticker. Enter exactly as per the sticker observing the correct case for all letters.
4. With 'Connect Automatically' enabled your computer will remember the password and connect to your Wi-Fi device when it is switched on and in range.

## TIP

It is also possible to connect via USB connection. Press Help on the web interface to learn more.

## QUICK REFERENCES

Browser home page	<a href="http://192.168.0.1">http://192.168.0.1</a>
Administrator login	admin
Default SSID	Virgin Mobile 4G_xxxxxx Supplied on your SSID sticker.
Default Wi-Fi Security Key	10 characters which are case sensitive. Supplied on your SSID sticker.



(password)	
Restore defaults	<p>From the powered up state: Open the SIM slot cover. Press the reset button for 5 seconds until the device LED's flash.</p> <p>All passwords and settings will be restored to defaults and the hotspot will reboot.</p>

## LOGIN TO THE USER INTERFACE

Open a browser and go to <http://192.168.0.1> to access the hotspot home page.

# The default login password is 'admin'

Virgin Mobile 4G Help

PC | Mobile


admin Login

Copyright © 1998-2016 ZTE Corporation. All rights reserved | [Open Source Licenses](#)

# HOTSPOT HOMEPAGE

The screenshot shows the Virgin Mobile 4G Hotspot homepage. At the top left is the Virgin logo and the text "Virgin Mobile 4G" and "SSID:Virgin Mobile 4G\_3AAF5F". At the top right are status icons for 4G, signal strength, globe, airplane mode, Wi-Fi, and 100% battery. Below the status bar are links for "Modify Login Password", "Logout", and "Help". A "Switch to Mobile" button is centered, with "PC | Mobile" and "view" below it. The main content area is divided into three sections, each highlighted by a dashed white circle and a numbered callout:

- 1 Access device**: "View your connected devices" section showing a monitor icon and a smartphone icon, with a "1" and a right-pointing arrow.
- 2 My router**: "Network and Connection Settings" section. It shows "LTE" with a green "ON" toggle switch and a "Settings" button with a right-pointing arrow. Below this is the "Wi-Fi" section with the text "Wi-Fi Security, SSID, Range and Password Settings" and a "Settings" button with a right-pointing arrow. A green checkmark is positioned above the Wi-Fi section.
- 3 Net surfing**: "Data usage summary" section showing a paper airplane icon, a Wi-Fi icon, and a cloud icon. It displays "01:10:56", "0b/s ↓", and "0b/s ↑".

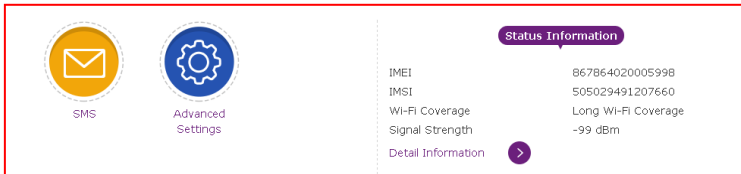

The home page shows you how many users are connected, your network connection state and data usage summary.

- The device will automatically connect to the network. Toggle the ON switch to disconnect.
- Press Settings to change the Network or Wi-Fi settings.
- Press to view SMS and Advanced Settings panels.
- Explore the rest of the User Interface to make any changes to your device behaviour.

# STATUS INDICATORS



**TIP:** You can also use your mouse to hover over each icon in the web interface for a brief description.

## VIEW THE HELP GUIDE TO LEARN MORE

Once you are logged into the device web page press Help to read the full user guide.