



# Telecom R203

Mobile Phone  
User Manual




#### LEGAL INFORMATION

Copyright © 2012 Telecom CORPORATION.

Version 1.0 March 2012 All rights reserved. No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of Telecom

 Corporation. The manual is published by Telecom Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

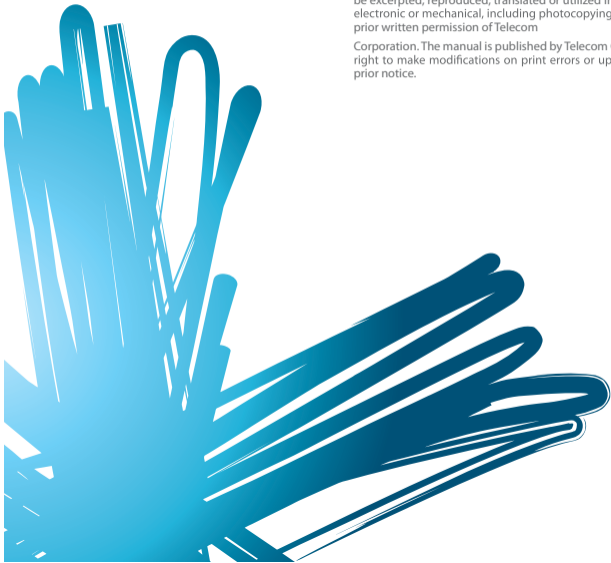

# Contents

1	Introduction	4
2	Getting Started	9
3	Get To Know Your Phone	13
4	Step By Step Guide	20

# 1

## Introduction

This section includes some important information on safety and efficient operation. Please read this section before using the phone.

### 1.1 General Precautions

- The antenna is located in the top portion of the handset, behind the display. When you are using the handset try to avoid shielding the antenna area with your hand. Hold the handset between your thumb and fingers towards the base of the handset. This will leave the antenna area clear to transmit and receive signals. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Keep the phone out of the reach of small children. The phone may cause injury or be damaged.
- Protect the handset from liquids. Only use a soft dry cloth to clean the handset.
- The handset will be damaged by liquid ingress. The handset contains a liquid detection sticker which changes colour when exposed to liquids. Liquid ingress is not covered by warranty under any circumstances.
- Do not expose the handset to solvents, chemicals or abrasive cleaning products.
- Do not expose the handset or battery to prolonged direct sunlight or temperatures exceeding 50° C. This may damage the battery and high temperatures can shorten the life of electronic devices.

- Please use original accessories only. Damage caused by non-genuine accessories may not be covered by your warranty terms and conditions.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks or bank cards. Do not expose to metal filings which can stick to the speaker area.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer may cause interference.
- Do not drop or throw your handset. Rough handling can cause physical damage.
- Do not attempt to disassemble the handset or battery.

## **1.2 Precautions While Driving**

- Obey all safety regulations and do not use your phone while driving.
- Do not place your phone on an airbag or in the airbag deployment area. If a phone is in the airbag deployment area it may be propelled with great force and cause injury to occupants of the vehicle.
- Please turn off your mobile phone at service stations as recommended.

## **1.3 Aircraft Safety**

- Please turn off your mobile phone before boarding as instructed by the airline personnel.
- Disable your alarms to make sure that the phone does not turn on during the flight.

## **1.4 Precautions for Medical Devices and Facilities**

- If you use a pacemaker please keep the phone at least twenty centimetres from the pacemaker when the phone is switched on. Do not carry the phone in your breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with hearing aids. In the event of such interference consult your hearing aid manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your device to determine if it is adequately shielded from RF energy.
- Obey the restrictions on the use of mobile phones at prescribed places such as hospitals, airports, service stations, refineries, chemical works etc. Switch off your phone as required.

## **1.5 Precautions for Potentially Explosive Atmospheres**

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause explosion or fire.
- To avoid possible interference with blasting operations switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.
- Do not store the phone with flammable or explosive articles.

## **1.6 Battery Safety**

- Do not short-circuit the battery terminals. Do not carry the battery in your pocket in case of accidental short circuits.
- Do not store battery in hot areas or dispose of the battery in a fire.
- Do not disassemble, pierce or modify the battery in any way.
- Please store the battery in a cool dry place if you are not using it.
- The battery is rechargeable but eventually it will wear out. When the operating time (talk time and standby time) is reduced you should replace your battery.
- Please stop using the charger and battery if they are damaged.
- Return the worn-out battery to your service provider or dispose of it in accordance with environmental regulations. Do not dispose of it in household rubbish.

## **1.7 Limitation of Liability**

Telecom shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not Telecom had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.

## 1.8 RF Safety (SAR)

SAR tests have been completed as per the Radiocommunications Standard 2003 (Human Exposure). The limit defined by this standard is 2.0W/Kg. The highest value SAR recorded for the device is 1.26W/Kg at 900MHz GSM.

### Notes

The pictures and icons shown in the manual are for reference only. The manufacturer reserves the right to update the product at any time.



### Warning:

If the battery is damaged do not recharge it. In the unlikely event of battery leakage avoid contact with your skin and wash the affected area thoroughly in water.



## 2

# Getting Started

## 2.1 Insert the SIM Card

Insert the SIM card with the metal contacts facing down and the notch on the bottom left corner as shown:



 
## 2.2 Insert the Battery

1. Insert the battery carefully with the contacts located against the gold springs - the battery will only fit one way.
2. Replace the battery cover. Make sure that the cover closes completely.



## 2.3 Charging the Battery

The phone can be charged in the On or Off state. Make sure that the battery is inserted before charging

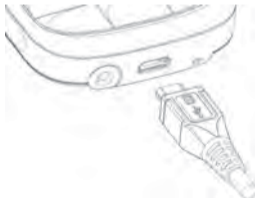

## 2.4 Battery Level Indicator



The phone will give an audible alert when battery is low and display a low battery message on screen. Please recharge the battery promptly to maintain service.

## 2.5 Switch Your Phone On

 
Press and hold the **Red key**  for 2 seconds to switch the phone on.

**Warning:** If you enter the wrong code three times your SIM card will be locked. The phone will request you to enter the PUK code. Contact your service provider to obtain the PUK code if required.

If your handset displays:	
PIN:	Enter the PIN supplied with your SIM card.
Emergency	Invalid SIM. Emergency Calls can only be made with an active SIM
Enter PUK code	Contact your Service Provider. You can find your PUK code on the back of the packaging or by contacting your service provider.

# Get To Know Your Phone



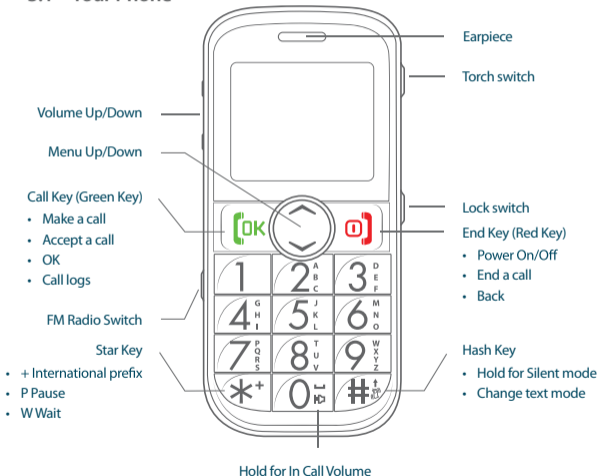









## 3.1 Your Phone





## 3.2 Main Display



### 3.3 Display Icons

	Battery level
	Network signal level
	New SMS message
	SMS memory is full
	Missed call
	Call Forwarding active
	Keypad locked
	Headset inserted
	Alarm enabled
	Silent Mode enabled
	CTM Mode enabled (TTY)
	Roaming

### 3.4 Key Functions

Function	Description
Call Key (Green Key) 	Press to make a call. Press to answer an incoming call From the idle screen, press to enter the call history list Press to confirm the function you choose
End Key (Red Key) 	Hold down to power on or off Press to End Call Press to go back to previous menu Clear text and numbers
Up Key	From the idle screen press to access the Phone Book Press to move cursor up
Down Key	From the idle screen, press to enter Main Menu Press to move cursor down
Hash Key	Press to input '#' Switch SMS text input mode – (Predictive) Hold down to switch on/off Silent mode
* Key	From the idle screen press to enter '*', '+', 'W', or 'P' Use + for the international dialling prefix. 'W' will wait until the next number is entered into the dialling sequence. 'P' inserts a 3 second pause into the dialling sequence. In SMS mode press to access common symbols



Function	Description
Numeric Keys	Enter numbers 0-9 and characters A-Z. '0' long press to access in call volume
Switch	Use this key to automatically dial and/or send a text message to a nominated number
Volume Keys	Adjust the volume up and down
Torch Switch	Turn the torch on or off
FM Radio Key	Turn the FM radio on by sliding up or off by sliding down
Keylock Switch	Lock and unlock keypad You can still answer calls and dial emergency numbers while the keypad is locked

## 3.5 Menu Map

### Phone Book

- Quick Search
- Add New Contacts
- Delete All
- Copy All
- Move All
- My Number
- Memory Status

### Messages

 
- Write Message
- Inbox
- Outbox
- Drafts
- Sent
- (U)SIM
- Message Settings
- Memory Status

### Call History

- Missed Calls
- Dialled Calls
- Received Calls
- Delete All Call Logs
- Call Time

### Organiser

- Alarms / Reminders
- Calendar
- Calculator
- SIM Toolkit

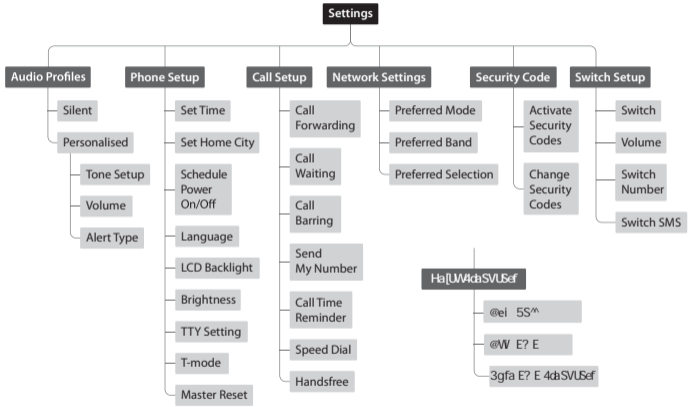

# Step By Step Guide

## 4.1 Switch Setting

The Switch on the back of the handset can be programmed to make a call and/or send an SMS to friends or relatives simultaneously.

- Press **Down** key to get to the **Settings** Menu.
- Go to **Settings > Switch Setup > Switch** to enable this feature. The switch is **Off** by default.
- Go to **Settings > Switch Setup > Switch Number** to program your phone numbers:
  1. The first location will define the voice call number.
  2. Location 2-5 defines the SMS numbers.
- Go to **Settings > Switch Setup > Switch SMS**: To send an automated text message you **must** enter a message in this field (maximum 29 characters).
- When enabled and programmed, pushing the Switch Key will send an SMS message to numbers 2-5 and initiate a call to the first defined number.
- The Alert tone (when enabled) will continue after the call until the Switch Key is pushed back to the down position.
- When the call is connected the handset automatically enables Handsfree (speaker-phone) mode.
- The alert tone volume can be adjusted to Off, Low, Medium or Loud.
- In any state, push the Switch key down to return the phone to standby mode.
- Switch Dialling is still activated when the keypad is locked.

## 4.2 Make And Receive A Call

- Enter the phone number using the number keys and press the **Green key** to dial. If you enter a wrong digit use the **Red Key** to delete the mistake. Long press the **Red key** to clear all the characters and return to the idle screen.
- Press the **\* key** twice to enter '+' for international dialling.
- Press the **\* key** three times for the Wait symbol 'W' which will hold dialling until the next key is pressed.
- Press the **\* key** four times for the Pause symbol 'P' which adds a 3 second delay into the dialled number.
- Press the **Green key** to answer an incoming call, press **Option > HF** on to enable speaker mode (Handsfree). Press the **Red key** to end or reject the call.
- If you have set speed dial numbers, long press the numeric keys (2, 4 to 9) to dial the corresponding contact.
- Press the **Volume keys** to adjust volume during the call.
- Press and hold the 0 key to select the **In Call** volume level which you can pre-define. Eg. If your normal ear-piece volume is 3, you can set the In Call volume setting to 5 which you can use in noisy environments to give a quick volume boost to the earpiece if required. See Audio Settings for more information.
- Press the **Red key** to hang-up (End) the call.

### 4.3 Add A Contact To Your Phone Book

**Menu > Phone Book > Add New Contact > To Phone, To SIM > Name > Edit**

Type in the Name, using the keypad letter keys, (eg press the key once for the first letter, twice for the second letter etc.), press OK when finished.

Press the # key to change text input modes (eZiEng, abc, Abc, ABC, 123) if required.

**Menu > Phone Book > Add New Contact > To Phone, To SIM > Number > Edit**



Enter the number using the number keys, press OK when finished.

Press **Done** and then **Yes** to Save when prompted.

### 4.4 Make A Call From The Phone Book

- Press the **Up Arrow Key** to open the **Phone Book Search** view.
- Press the letter keys shown on the keypad to search for the name of your Phone Book contact.
- Eg. Press 5 to search for John. Press 5 twice to search for Karen.
- Use the up and down arrows to scan your Phone Book contacts.
- When you have selected the required contact press **Option > Dial** to make a call to that contact. Select the correct number where multiple numbers are stored.

## 4.5 Messages

- The envelope icon  indicates a new message.
- Press the **Green key** to read the message. Press the **Red key** to exit.
- The double envelope icon  indicates the mail box is full. Please delete some SMS messages.
- From the idle screen, press **Down > Down** to access **Messages > Write Message** to start a new message.
- Press the **Green key** for the option to save or send the SMS.
- Press the **# key** to switch text input methods (eZiEng, abc, Abc, ABC, 123).
- The Inbox shows all your received messages. Press OK to view the message. Press Options to Reply,
- Delete, Forward, Delete All, Use Number, Move to (U)SIM, Copy to (U)SIM.
- The Outbox shows messages that failed to send. Sent shows sent messages.
- Drafts shows all your saved messages which have not been sent.
- Select Message Settings for Valid Time, SMS Centre Number, Delivery Report and Cell ID Display options.

## 4.6 Text Input methods

1. When editing text, press the **# key** to change between eZiEng, abc, Abc, ABC, or 123.
2. Input Letters: In **abc** modes, press the letter keys until the correct letter appears.
3. Input Words: In **eZiEng** mode, input each letter with a single key press. The word updates as you enter more letters. Predictive text is based on a built-in dictionary. When you have finished writing the word confirm by pressing the **Green key**. If the word is incorrect, press the **Up/Down key** to view other words in the dictionary or enter using **abc** modes (multi-tap).
4. In **123** mode, press the key to enter a digit. In **eZiEng** mode, hold the key until the number appears.
5. Press the **\* key** to open the symbols list. Press the **Up/Down keys** to select a symbol. In **eZiEng** mode, press the **1 key** for common symbols and use the **Up/Down** keys to highlight the required character.
6. Press the **0 key** to input space (not available in 123 mode).
7. Press the **Red key** to clear a character. Hold the **Red key** to delete all characters.
8. Press the **Up/Down keys** to move the cursor to left or right.



## 4.7 Phone Book

You can save names and numbers to the phone memory and the SIM card.

- Select **Phone Book > Add New Contact** to add a new contact to the SIM or phone.
- Select **Phone Book > Quick Search** to view the phone book. Input the first letters of the name, the phone will list the corresponding records.
- Select **Phone Book > Delete All** to delete all contacts from the phone or SIM. Or select **Option > Delete** in phone book list to delete the contacts one by one.
- Select **Phone Book > Copy All** or **Move All** to copy or move all from SIM to phone or phone to SIM.
- Select **Phone Book > Memory Status** to view SIM card or phone memory status.

## 4.8 Speed Dial

- Once you have saved some Contacts you can assign speed dial keys to your favourite contacts.
- Select **Settings > Call Setup > Speed Dial > Set Number**. Program speed dial keys. Once saved, long press the key to activate **Speed Dial** to the preset number.

### Note:

Speed Dial 1 = Voice Message Bank, Speed Dial 3 = International Message Bank. Speed dial numbers can only be set to numbers already in your **Phone Book**.

- Press and hold the programmed number key to quickly call your assigned Contact.
- Speed Dial is On by default. Go to **Settings > Call Setup > Speed Dial > Status** to enable or disable the feature.

## 4.9 Call History

- From the stand by state, press the Green key to check your call history.

## 4.10 Audio Settings

Select **Settings > Audio Profiles > Personalise** to set the following:

### a) Tone Setup

1. Incoming Call
  2. Alarms / Reminders
  3. Power On
  4. Power Off
  5. Message Tone
  6. Keypad Tone
  7. Alert Tone
- The Power On / Off tones are played when the phone is switched on or off.
  - The volume level for the Power On and Off tone is linked to the Ring Tone volume.

## **b) Volume**

1. Ring Tone
2. Key Tone
3. Earphone
4. In Call Volume \*

- \* **Settings > Audio Profile > Personalise > Volume > In Call Volume** sets a preferred second volume setting to quick change the standard earpiece volume. This is activated by long pressing the 0 key during a call.

## **c) Alert Type**

- Ring Only
- Vibrate then Ring
- Vibrate Only
- Light Only
- Vibrate and Ring

## 4.11 Phone Settings

- Select **Settings > Phone Setup > Set Time** to set time (24hrs only) and date. **Network Time** is enabled by default and will automatically update the time from the network. Switch off **Network Time** to set the time and date manually.
- Select **Settings > Phone Setup > Set Home City** if required.
- Select **Settings > Phone Setup > Schedule Power On/Off** to set automatic power on/off time.
- Select **Settings > Phone Setup > Language**. Select from English or Chinese.
- Select **Settings > Phone Setup > LCD Backlight** to set the backlight timeout.
- Select **Settings > Phone Setup > Brightness**.
- Select **Settings > Phone Setup > TTY setting** – Used for teletype equipment.
- Select **Settings > Phone Setup > T-mode** – Enable T-coil support for hearing aids.
- Select **Settings > Phone Setup > Master Reset** – Restore factory settings. The default phone lock code is 0000.

## 4.12 Call Settings

- Select **Settings** > **Call Setup** > **Call Forwarding**. Enables your calls to be diverted to another number when your phone is busy, after no reply, or unreachable.
- Select **Settings** > **Call Setup** > **Call Waiting**. If you are on a call you will be notified of another incoming call. Press **Options - Swap** to switch between the two calls.
- Select **Settings** > **Call Setup** > **Call Barring** to bar your handset from making outgoing calls in various circumstances. Contact Telecom to get it activated.
- Select **Settings** > **Call Setup** > **Send My Number**. By default your number is displayed to the other party. You can disable this if preferred.
- Select **Settings** > **Call Setup** > **Call Time Reminder** > **Periodic** (set your required time from 1-3000 seconds). You hear a beep during an active call to remind you of the current call duration.
- Select **Settings** > **Call Setup** > **Speed Dial** > **Set Number**. Program speed dial keys. Once saved, long press the key to activate **Speed Dial** to the preset number. Note: Speed Dial 1 = Voicemail, Speed Dial 3 = International Message Bank. Speed dial numbers can only be set to numbers already in your Contacts.
- Select **Settings** > **Call Setup** > **Handsfree**. When switched on, all calls are automatically presented in Handsfree (speaker-phone) mode.

### 4.13 Settings > Network Settings

There is no need to change any of these settings. The handset will automatically choose the best available network.

### 4.14 Settings > Security Code

Select **Settings > Security Code** to Activate or Change PIN codes.

The **Handset Code** is shown on power up and protects the handset from wrong use.

The **PIN** code is stored on the SIM card and protects the SIM (account) from misuse.

### 4.15 Organiser > Alarms / Reminders

Select **Organiser > Alarms/Reminders** (see the table below...).

- Select the required Alarm or Reminder function from the available options.
- Select **Add > Edit** to enter a name (optional).
- Press the down arrow to select the **time field** (hh:mm), press **Change** to enter the alarm time.
- Press the down arrow to select the **date field** (dd.mm – when applicable), press **Change** to enter the required date.
- Press **Done** to save the alarm when finished.
- If the phone is switched off, the alarm function will power on the phone.

Alarm Name	Required Fields	Alarm Type
Birthdays	Set the Name, Time and Date	Annual
Important Dates	Set the Name, Time and Date	Annual
Medication Reminder	Set the Name, Time	Daily
Getting Up	Set the Name, Time	Daily
Entertainment	Set the Name, Time	Daily
Count Down	Set the Name, Countdown time	Once
Others	Set the Name, Time, date, repeat	Set by the user

#### 4.16 Organiser > Calendar

- Go to **Organiser > Calendar** to view the calendar.

#### 4.17 Organiser > Calculator

- Go to **Organiser > Calculator**. Press Up/Down keys to highlight the required functions +, -, \*, /, = and press the **Green key** for **Equals**.
- Press the **Red key** to clear input information and to exit the calculator.

#### 4.18 Torch

Switch the torch on or off using the side switch. The torch works whether the handset is on or off, or in the locked or unlocked state so be careful not to activate the torch while the handset is in your pocket.

## 4.19 Keylock Switch

Slide the **Keylock switch** down to lock the keypad. If you get an incoming call, you can press the **Green key** to answer or the **Red key** to reject the call. You can also dial emergency numbers when the keypad is locked.

### Technical Reference

## 4.21 Technical Specifications

Network	UMTS 850, 2100 MHz, GSM 900, 1800 MHz
Dimensions LxWxH	Approx 109mm x 50.8mm x 13.5mm
Weight	Approx 86.1g (including standard battery)
Features	UMTS / GSM Handset with SMS, FM Radio, 3.5mm headset jack, LED torch and Programmable Switch Call function.
Battery	1000mA hours, Lithium ion (Li-ion)
Screen	128 x 160 pixels, 1.8" colour LCD
Continuous idle time*	Up to 300 hours (+/- 20%)
Continuous talk time*	Up to 3 hours talk time (+/- 20%)
Charge time	Approximately 3-4 hours
Battery Life	Approximately 400 charge cycles



## 4.22 Service Information

- For Warranty Service directions please see <http://www.telecom.co.nz>
- All calls for PIN number enquiries, Network problems, Web Access, Account and Billing Information, and general enquiries should be directed to Telecom.

## 4.23 Warranty Information

**The warranty does not apply to defects or errors in the product caused by:**

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water, exposure to solvents or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside Telecom's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

The End User shall have no right to reject, return, or receive a refund for any product from Telecom under the above-mentioned situations. Your statutory rights are not affected.

**Note: Consult the warranty card for full information.**

# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---



