




V795 Overview



Key Functions

Keys and Icons	Function
Power Key	Hold down to power on your phone. Press to switch to sleep mode. Press to wake up. Hold down for Silent mode, Airplane mode or Power off.
Back 	Press to go to the previous screen. Press to exit applications.
Home 	Press to return to the Home Screen from any screen. Hold down to access Google Search
Options 	Press to get the options on the current screen. Hold down to see the recently used applications.
Volume Keys	Use to control the volume Up and Down

Keys and Icons**Function**

Phone icon – Open the dialer for Calls



Contacts – Open your Phonebook for all your Contacts



 
Apps – Open the Applications menu



Messages – go to the Messages app, for SMS and MMS

Insert the SIM Card

1. Open the back cover using the thumb catch at the base of the device
2. Hold the SIM card with the gold contacts facing down and the cut corner facing left as shown and slide it into the card holder. Push it fully home.
3. Your handset includes a 4GB memory card. If you wish to increase the memory capacity insert a microSD card up to 32GB with the metal contacts facing down as shown above.
4. Insert the battery taking care to line up the gold contacts.
5. Replace the cover and snap down to shut securely.

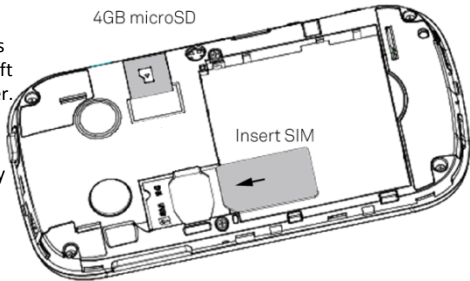

Switch your device On or Off, Charge your battery

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu.
- Touch **Power off** and then touch **OK**.

Insert the charger lead carefully.

Ensure the plug is inserted with the correct orientation.

Do not force the connector into the charger jack.

 
 
Connect the charger to a standard AC wall outlet.

Disconnect the charger when the battery is fully charged.

If the phone is on, you'll see the charging icon  /  on the status bar.

How much charge have you got?

If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the lock screen will tell you the battery level each time you wake up your phone.

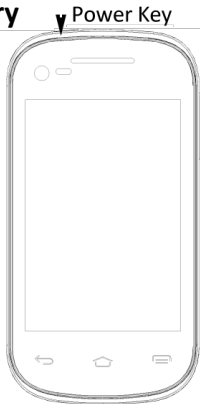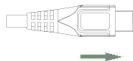

Setting Up for the First Time

When you first power on your phone or after a factory reset you need to enter some settings before use.





















1. Touch the Android logo to begin. The default language is English (New Zealand) touch Change language if required
2. Select **Create, Sign in** to enter a Google account or **Skip** to set up later.
3. Configure the Google location options and touch **Next**.
4. You will be prompted to accept the terms of Google service. Touch **Next** to continue.
5. Set your Location preferences
6. Touch **Finish** to complete the setup.
7. Further assistance is given in the form of pop ups describing how to use various features. Press OK to clear these notices.

The Home Screen





















Drag the notifications bar down to review



Notification Icons

	New SMS or MMS		microSD card not mounted
	New Email		microSD card removed
	New Gmail message		Upcoming event
	New Google Talk message		Call on hold
	Problem with SMS/MMS delivery		New Wi-Fi network detected
	Missed call		Portable Wi-Fi hotspot or Wi-Fi direct is on
	Call in progress		Uploading or downloading data
	USB connected		USB tethering is on
	GPS is on		Updates available
	Song is playing		Bluetooth on


Phone Status Icons

	3G network		No Network signal
	HSDPA network		Signal strength (no data)
	Airplane mode		Signal strength (data ready)
	Battery flat		Mobile data in use
	Battery low		Wi-Fi connected, no data
	Battery partially drained		Wi-Fi with internet access
	Battery full		Wi-Fi data in use
	Battery charging		Ringer off
	Wired headset connected		Meeting mode, Vibrate On
	Speaker on		Muted (microphone off)

The Notifications and Quick Settings Panel

The Notifications bar at the top of the Home Screen shows useful device and status information. Use the quick settings panel to enable Wi-Fi, Bluetooth, change Profiles and enable other settings.

 Pull down the bar at the top of the display to view the Notifications and Control panels:

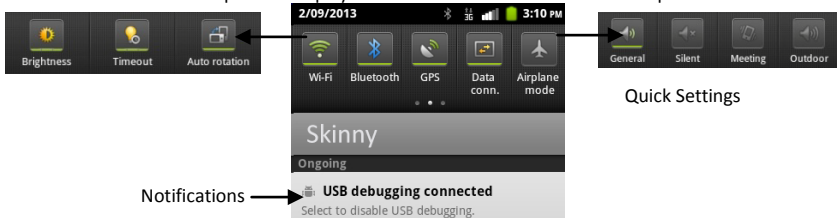

Access the full user guide on line

The full user guide is available to download from zte.co.nz/skinny