

ZTE Blade D, Chat 4G (A460) Quick Start Guide

This is the Quick Start Guide only. For full details see
ztemobiles.com.au


For support contact ZTE Australia on Facebook,
Google+ Twitter and Instagram



Find us on
Facebook



Getting to Know Your Phone

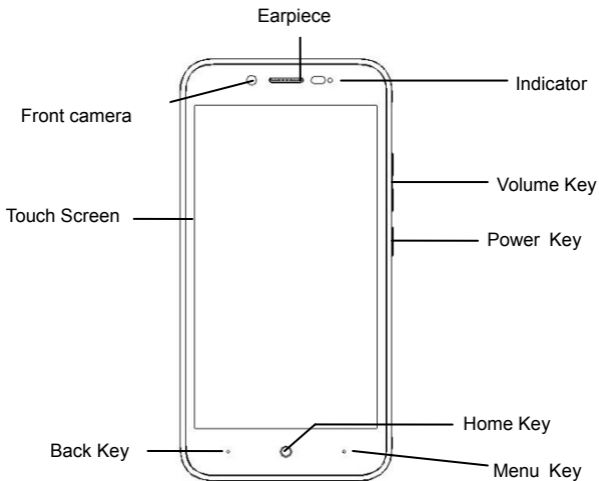

Power Key

- Press and hold to power on, select phone modes, turn airplane mode or on off, reboot your phone, or power off.
- Press to turn the display on or off

Home Key

Touch to return to the home screen from any application.

Menu Key

Touch to get the options for the current screen.

Touch and hold to see recently used applications.

Back Key

Touch to go to the previous screen.

Volume Key

Press or hold to turn the volume up or down.

Starting Up

Switch off your phone before installing or replacing the battery or the SIM card. The microSDHC™ card is optional extra and can be used for additional storage of photos, videos and pictures.

1. Place your thumb in the slot at the bottom of the back cover to lift and remove the cover.

2. Hold the SIM card with its cut corner oriented as shown and insert it fully into the card holder.



3. Align the gold connectors on the phone and the battery and gently press the battery into place.




4. A microSD can be fitted into the slot to the right of the SIM card if required.

5. Align the back cover with the back of the phone and press the cover back into place.

Charging the Battery

1. Insert the charging lead carefully with the correct orientation. Do not force the connector into the charging jack.

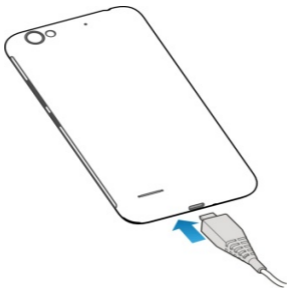



















2. Connect the charger to a standard AC power outlet.
3. Disconnect the charger when the battery is fully charged.

Powering On/Off Your Phone



- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** > **OK**.

Product Safety Information






	Do not use hand-held while driving		Do not use while re-fuelling
	For body-worn operation maintain a separation of 15 mm		This device may produce a bright or flashing light
	Small parts may cause a choking hazard		Do not dispose of it in a fire
	This device may produce a loud sound		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with magnetic media		Avoid Extreme Temperatures
	Keep away from pacemakers and other personal medical devices		Avoid any contact with liquid, keep it dry
	Switch off when instructed in hospitals and medical facilities		Do not attempt to disassemble
	Switch off when instructed in aircrafts and airports		Only use approved accessories
	Switch off in explosive environments		Do not rely on this device for emergency communications

How to get to Settings





There are a few ways to get to the Settings menu:


1. Go to Apps > Settings 
2. Pull the screen down twice and press 

Making Calls

1. Touch Home Key >  > 
2. Enter the phone number using the keypad. Touch  to delete wrong digits.
3. Press Options  to add a Pause or Wait if required
4. Press and hold the 0 key to enter the plus (+) symbol for international dialling.
5. Touch the Phone icon  below the keypad to dial.

Options during a call



- Press  to open the number pad
- Press  to use loudspeaker (Handsfree) mode
- Press  to mute the microphone
- Press  to put the current call on hold



Press  to dial in another party (Conference)



Press  to End the call

When you receive a phone call

The display shows the caller ID and any additional information about the caller saved in Contacts.

touch  and slide right to  to answer the call,

touch  and slide left to  to reject the call,

touch  and slide up to  to reject the call and send an SMS which is displayed on screen. Set the SMS at Dialler >

Options > Settings > General Settings > Quick responses

TIP: You can silence the incoming ring by pressing either of the Volume keys.

Adjusting Volumes


The side volume keys work in three different ways:

1. When you are on a call use the volume keys to adjust the in call volume.
2. When you are using a media application, such as music, video or games, the volume keys adjust the media volume.
3. At other times when you are not in either of the above states,

the volume keys set the ringtone volume or enable vibrate mode at minimum volume.

Quick Enable Silent or Vibrate mode

With the screen On, long press the Power Key to see Silent, Vibrate and Normal ring modes indicated by the icons at the bottom of the panel.

Go to Apps > Settings > Audio Profiles >  > Vibrate to enable Vibrate on Ring.

Access the Quick Settings Panel

Swipe down from the top of the screen to view the Quick Settings panel. Tap each icon to switch On or Off. Touch Wi-Fi or Bluetooth (under the line) to configure those features.

Connect to a local Wi-Fi network



1. Touch Home > Apps > Settings > Wi-Fi, switch to On.
2. Tap Wi-Fi to view available networks.
3. Touch a network name to connect to it.

Previously connected networks will connect automatically. If the network is secured enter the password.

Messaging

You can use **Messaging** to exchange text messages (SMS) and multimedia messages (MMS).

Touch  on the Home screen to open Messaging

1. Touch  to write a new message.
2. Touch  to search within messages
3. Touch an existing message to open the thread.

Send a Text Message

From **Messaging** touch  to create a new message.


Enter the recipient's number or name if they are stored in your Contacts. As matching contacts appear you can touch a suggested recipient.

Touch the **Type message** field, and enter your message using the keypad.

Touch  to Send.

Reply to a Message

Messages you receive are appended to existing threads of the same number. A new thread is created for new numbers.

1. On the **Messaging** screen, touch the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can touch the attach icon **+** if you want to reply with an MMS.
3. Touch  to Send.


View Message Details

1. Touch and hold a message in a thread.
2. Touch **View message details** to see the message type, sender or receiver, time and date .

Send a Multimedia Message

From **Messaging** touch  to create a new message.

Enter the recipient and the text of the message,

Touch attach  to add an attachment from the following:


Pictures	Select a picture to add to your message.
Capture picture	Take a photo and add to your message.
Videos	Select a video clip to attach to your message.
Capture video	Shoot a video clip and add to your message.
Audio	Select an audio file to add to your message.
Record audio	Record an audio file for your message.
Slideshow	Add a series of pictures
Insert Contact Contact vCard	Select a contact to add to your message as an attachment
Calendar Event	Add a Calendar event such as an appointment or meeting (VCS).

Touch  to Send.


TIPS: The maximum MMS size is 300KB. Large images are automatically re-sized but video files may be too large to send. Send large Video files by email instead or share using Social Media.

Forward a Message


In **Messaging** touch the thread to open the SMS.

1. Touch and hold the message.
2. Touch **Forward** in the menu that opens.
3. Enter a recipient for the message and edit the content if you want.
4. Touch  to Send.


Delete an individual message:

1. On the **Messaging** screen, touch the message to delete
2. Press  for Options > Delete

Delete message threads:

1. On the **Messaging** screen, touch and hold the thread to delete.
2. Touch  to delete.

Message Settings

From the Messaging screen touch  > **Settings**


Open/Close the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your phone as a Wi-Fi hotspot. You can open the notification panel to view the details of notifications.


- To open the notification panel, swipe your finger down from the top of the screen.
- To close the notification panel, swipe your finger up from the bottom of the screen or touch the Back Key.

Respond to or Remove a Notification

In the notification panel, you can respond to a notification or remove the notifications.

- To respond to a notification, just touch it.
- To remove a notification, swipe it sideways.
- To dismiss all notifications touch 
- Most apps that send notifications, such as Gmail and Hangouts, have notification settings that you can adjust.
- From the lock screen you can double tap the notification to open it

Apps drawer

Touch Home Key > Apps  to open the Apps menu. Slide left or right to view more.