

Telstra Lite 2

Z2315T

User Guide

ZTE Australia provides dedicated support with a call centre and social media outreach.
Search 'ZTE Australia' on Facebook and Twitter to keep in touch.

© ZTE 2020 Ver1.1 July 2020



The SAR value for this device is published on ztemobiles.com.au

Contents

Getting started	4
Key definitions.....	5
Inserting and Removing the SIM card	5
Getting to know your phone Charging the Battery	8
Switch your phone on.	8
Wake up your phone.....	9
Make and answer calls	9
Make a call.....	9
Answer a call.....	11
Reject a call	11
End a call	11
Adjust the volume	11
Turn the speaker on or off.....	11
Add a multi-party or Conference call	12
Contacts	12
Add new contact	12

Delete contacts	13
Edit contact details	13
Search contacts	14
Import/Export contacts	14
Messaging	15
Send messages	15
Receive messages	16
Main Menu	16
Connectivity	17
Bluetooth®	18
Connect to a Computer to transfer files	18
Flight mode	19
About phone	19
Camera	21
Video recording	21
Media Centre	22
Music Player	22
Sound Recorder	23

Gallery.....	23
FM radio.....	24
More Applications	24
File manager	24
Calculator.....	25
Calendar	25
Technical Specifications	28
FAQs & Troubleshooting	30
Disposal of your old phone.....	34

Getting started





Key definitions

Left Soft Key	Messages. Long press to review Notifications
Right Soft Key	Contacts
Power key	Press and hold (long press) to switch the handset On. Press to light up the display. Press to hang up a call in progress or reject an incoming call. Press and hold (long press) to power off the phone.

Inserting and Removing the SIM card

1. Switch off your phone and disconnect any external power.
2. Remove the back cover using the thumb catch on the bottom corner of the handset
3. Remove the battery.
4. Insert your SIM card face down into the card holder with the edge with the cut corner going in first. (There is a diagram of the SIM card next to the SIM slot)
5. microSD memory is an optional extra to expand your personal storage. The phone accepts microSD cards up to 32GB with FAT32 format.
6. Replace the battery, back cover and press to lock down.

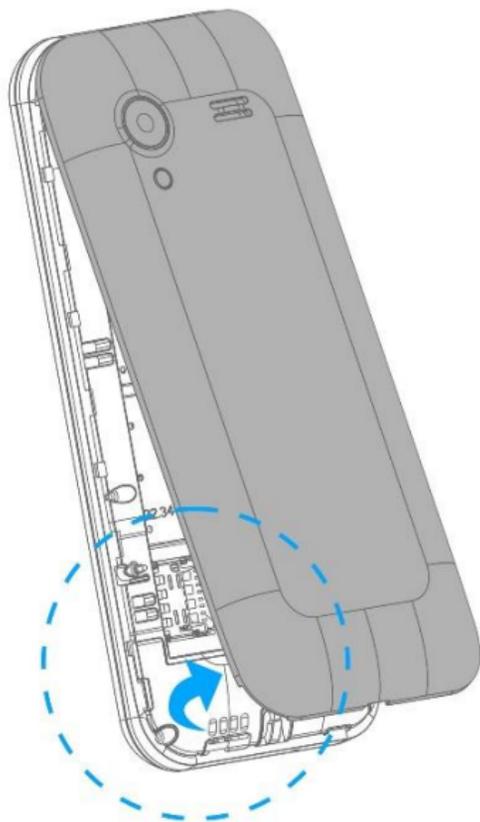

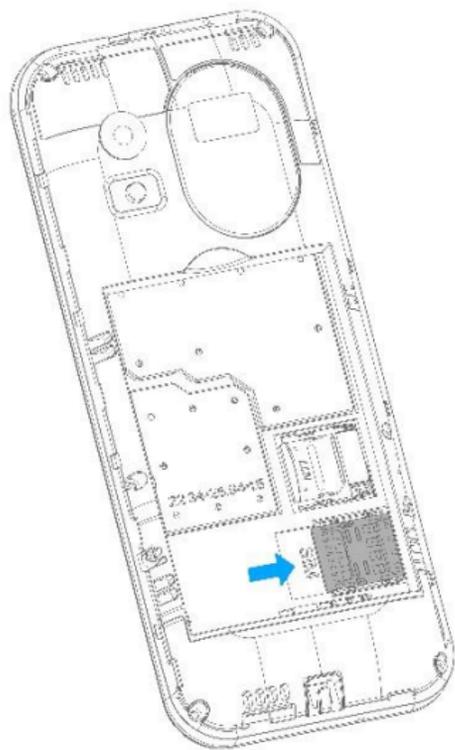

Getting to know your phone

Charging the Battery

Connect the charger to the phone using a USB cable, and plug the charger into a standard power socket. Only use the approved charger and USB lead provided.

Always insert the charger lead carefully.

Check the plug and socket are aligned correctly.

Do NOT use excessive force which may damage the USB port.

Be careful to avoid tripping on the lead whilst it is plugged in.

Physical damage to the USB port is not covered by warranty.

Switch your phone on.

After inserting the SIM card, replace the battery and the back cover. Then press and hold the **Red key** for 2 seconds to switch the handset on.

The phone will be ready to use after a short time.

Wake up your phone

To save power the display will automatically dim and turn off after a pre-set period of time (see **Menu > Settings > Display > Sleep**).

After the phone switches to the sleep mode press the power key to switch the display back on. The keypad will be locked, Long press the **Star** key (*) to unlock it.

Make and answer calls

Make a call

You can make calls from the keypad, call log, or Contacts app.

Directly make a call

From the home screen enter the phone number using the key pad then press the **Green Call Key** to make the call.

Make a call from the Call History list

Press the **Green Call Key** to open the call log screen. Select a recent caller from the list using the navigation keys then press **Detail > Dial** or just press the **Green Call Key** to dial the number.

Make a call from Contacts

On the home screen select the **Right Soft Key** to open **Contacts**. Select the required Contact from the list using the navigation keys. Press **Select > Dial** or just press the **Green Call Key** to dial the number.

Dial from Messaging

On the home screen, press the **Left Soft Key** for **Messaging**

Select a message or conversation using the navigation keys and press the Ok key to view the message.

Press **Options (Left soft key) > Call** then press the **Green Call Key** to dial.

Make an international call

Press the star key (*) to open the dialer then long press the star key until the star that appears turns into a plus sign (+). When the call is made the plus sign is replaced by the calling country's International code (IDD), eg Australia's IDD is 0011. Then enter the country code, region code and phone number. If calling a mobile number leave out the first zero, eg 0499 99 999 would be 499 999 999. When dialing a landline in Australia leave out the first zero in the area code, eg 02 9999 9999 would be 2 9999 9999.

Answer a call

Your phone will ring, vibrate or both (depending on the current mode and settings) for an incoming call. Press **Answer (Left soft key)** or the **Green Call Key** to answer the call. If the earphone is inserted, press the button on the earphone to answer the call.

Reject a call

Press **Hang Up (Right Soft Key)** or the **Red Key** to reject a call.

End a call

To hang up a call press **Hang Up (Right Soft Key)** or press the **Red Key**

Adjust the volume

During a call, you can raise or lower the volume by using the **Up** and **Down** navigation keys.

Turn the speaker on or off

During a call, press the **Options (Left Soft Key) > Speaker** to turn the speaker On.

To turn the speaker Off press **Options (Left Soft Key) > Earpiece speaker**.

Add a multi-party or Conference call

During a call press **Options (Left Soft Key)** then **Add call**. Dial a number and press the **Green Call Key** to add one call and put the current caller on hold. Press **Options (Left Soft Key)** then **Merge call** to join the two (or more) parties together to create a conference call.

Contacts

You can go to **Contacts** by pressing the **Left Soft Key** or **Menu > Contacts App**.

Add new contact

Press **Contacts > Options > Add contact**.

Select **Phone** or **SIM Card** to specify where the contact will be stored.

The first field is **First name**, if you want to enter a title such as Mr, Mrs, Dr press the **Up** or **Right navigation key** to highlight the small down arrow to the right of the **First name** field, then press the **OK** key. A new **Name prefix** field will be inserted before the **First name** field.

When finished press the **Options > Save** to save your Contact, or just press the **Red key** and the contact will automatically be saved.

Delete contacts

Press **Contacts** to show the list of contacts.

To delete a single contact

Use the Navigation keys to highlight to contact to delete.

Press **Select > Options > Delete** then confirm with the **OK** key.

To delete multiple contacts

Press **Options > Multi-Select**.

Select the contacts you want to delete one by one by pressing the **Ok key** when they are highlighted.

To select all contacts use the **Up navigation key** to highlight **Selected(0)** then press the **Ok key**.

When the required selections are made, Press **Options > Select (Ok key)**. Then confirm with the **Ok key**.

Edit contact details

In **Contacts**, highlight the contact to edit using the **Navigation keys**.

Press **Select (Ok key)**

Press **Options > Edit**

Edit the contact information, see **Add New Contact**.

Press **Options > Save** to save your changes.

Search contacts

When you open **Contacts** the cursor will either be in the **Search** field or the last contact that was highlighted. Use the **Up navigation key** to move up to the Search field.

Press a letter key on the keypad. The phone will automatically list all matched contacts containing that letter.

Scroll up or down the Contacts list to select the chosen Contact or press another letter to refine the search.

Import/Export contacts

In **Contacts**, press **Options > Import/Export**.

Choose whether to import from / export to the SIM card or input from / export to a microSD card if installed.

To select all contacts use the **Up navigation key** to highlight **Selected(0)** then press the

Ok key.

Messaging

On the home screen press the **Right Soft Key** to open **Messaging**

Send messages

1. Press **Options >Newmessage**

2. Input your desired name or phone number in the **To** field. Press and hold the # key to change text entry mode to letters or numbers.

You can also press **OK** to select a contact from your Contacts list.

3. Press the **Down arrow key** to Input text. The default text entry mode is **Multi-tap**.

Multi-tap means that if you press a key quickly it will cycle through the letters as indicated on each key. Press and hold on the # key to select a predictive text mode indicated by T12 abc, T12 Abc or T12 ABC. To return to Multi-Tap select abc, Abc or ABC. Select 123 to input numbers.

4. Press **Options >Add attachments** to send a picture, video or audio file – the message will be sent as a multimedia message which requires carrier data access.

5. Press **Send** to send the message.

Receive messages

1. When you receive a message the handset will light up, vibrate and play a tone depending on your current settings. The message icon will show at the top of the screen.
2. Press the Messaging icon then open the message.
3. Enter text to reply to the message. Press **Back** then **Send**.

Main Menu

Use the navigation keys to highlight the required item then press the **OK** button to select it.

- 1 -Call history: review incoming and outgoing call records
- 2 -Contacts: view and add Contacts to the phone
- 3–Gallery to view your photos
- 5 -Messaging: access SMS and MMS messages
- 6–FM Radio
- 7 -Music

8 -Camera: access the camera to take pictures and videos

9 -Settings:Wireless & network, Accessibility, Sound & notifications, Display, Phone settings, Call settings, About phone, System update

Clock

Calendar

File Explorer

Extra – Sound recorder, Video player, Calculator, Notes, Torch

Connectivity

Your phone can connect to the Internet via your mobile phone operator.

The icons on the Status bar indicate which kind of data network you're connected to.

Turn Data Off

Go to **Menu >Settings >Wireless & networks > Data usage** to switch data on or off.

To check data usage, select **Mobile data usage** in the same menu.

Wi-Fi

Wi-Fi is on by default. Go to **Menu > Settings > Wireless & networks > Wi-Fi** to log on to

local Wi-Fi networks. Secured networks require a password.

To check Wi-Fi data usage go to **Menu > Settings > Wireless & networks > Data usage> Wi-Fi data usage**.

Bluetooth®

Via the Bluetooth® function, you can exchange data with other Bluetooth devices that are within a short distance.

Turn on/off Bluetooth®

Go to **Menu > Settings >Bluetooth**. Press **OK** to switch Bluetooth On or Off. Available devices will be shown on the screen.

Pairing

1. Your phone will scan for and display all available Bluetooth® devices.
2. Select the desired device to start the pairing. Usually you will need to enter a PIN number which can be 0000, 1234 or generated by the other device.

Connect to a Computer to transfer files

Transfer audio, video and picture files between your handset and your computer.

PC

Connect your handset using the USB data lead supplied.

First time, select **Install driver** on the handset notifications window.

On your PC, use Windows Explorer to open the CD Drive (X): USB_Driver, then double click Setup to install the handset drivers. (X) will be the drive letter that Windows assigns.

Subsequently, select **Media Device (MTP)** from the notifications window, which will open the handset in Windows Explorer.

MAC

On your MAC, download and install 'Android File Transfer'.

Connect your handset using the USB data lead supplied.

Select **Media Device (MTP)** from the notifications window, which will open the handset on your MAC.

Flight mode

In areas where the use of mobile devices is restricted, you can activate **Flight mode**. You will not be able to make/answer calls, send/receive messages in **Flight mode**.

Go to **Menu > Settings > More > Flight mode**.

About phone

You can check the phone's status, battery use, software version, etc.

Go to **Settings >About phone> Status**.

Camera

Your phone has a 2mp rear camera when the flip is opened. You can set a photo you've taken as the wallpaper, a contact photo or send it through MMS, Bluetooth or Gmail.

1. Go to **Menu >Camera**.
2. Press **Options** to change Filters, Storage location, Light sensitivity setting (ISO), Brightness, WhiteBalance (WB), Picture size, Shutter tone, and auto preview.
3. Press **OK** to take a photo.
4. Press **Gallery** to view your photos

Video recording

Your phone can record video clips.

1. Go to **Menu >Camera**
2. Use the left/right keys to select the  option to activate the video recorder
3. Press **Options** to change Storage location and Video quality
4. Press **OK** to start recording, press **OK** again to stop recording

5. Press **Gallery** to view your video clips

Media Centre

Allows you to play music and videos, record sound, show your photos and listen to the radio.

Go to **Menu > Media centre**

Music Player

Listen to music saved in the phone or on a memory card.

Go to **Menu > Media centre>Music**

A list of available songs will be displayed.

Press **OK** to play the highlighted song, press **OK** again to stop play.

Press Options to set a playlist, set a song as a ringtone, etc.

Sound Recorder

You can record audio files through sound recorder.

Go to **Menu > Media centre>Sound Recorder**

Press **Record** to start recording, Select **Done** to stop recording or **Pause** to pause the recording. When paused press **Resume** to continue the recording.

When you have finished recording you change the default filename and press **Save** to save it or press **Discard** to cancel it.

Press **List** to view saved recordings and play them or press **Options** to manage the recordings.

Gallery

Menu > Gallery. View your pictures and videos.

FM radio

You need to insert the wired headset that comes with your phone to act as an antenna, so always connect the headset when using the radio. When you receive an incoming call while listening to the radio, the radio will turn off.

Go to **Menu > FM Radio**.

The FM radio scans and saves available stations automatically.

More Applications

File manager

Go to **Menu > File Manager** icon. You can view all files saved in the phone or on the memory card.

Alarms

Go to **Menu > Clock > Alarm** to set an alarm. Alarms will switch the handset On even when it is switched off.

World Clock

Go to **Menu >Clock> World Time** to add a new world time location (City)

Timer

Go to **Menu > Clock>Timer**Select Play to start the timer. Press Stop to stop the alert.

Press +1 to add 1 minute, press + to add a new timer event.

Stopwatch

Go to **Menu >Clock > Stopwatch**. Select Play to start the Stopwatch. You can Record the time, Pause the time or Share the results.

Calculator

Go to **Menu >Extra >Calculator**

On the **Calculator** screen, slide the screen to the right or left to switch between **Advancedpanel** and **Basic panel**.

Calendar

Go to **Menu >Calendar**

Calendar Events

If you want the events recorded just in the phone and not synced to Google. Press Options > Calendars to display and press Select on the calendar name. A tick should appear to left of the calendar

Creating a new Event

1. Press **Add** to create a new calendar event.
2. Enter the event name and location.
3. To set the duration for the event, Select**From** and **To**.
4. Enter the event time zone and description.
5. If you have more than one calendar, select the calendar where you want to save the event.
6. Select the **Repetition**.
7. Set the time of the reminder in **Reminders**.
8. Select**Save**.

Sync an external calendar

If you join your Google calendar on line you are able to sync that into your phone calendar:

1. On the calendar screen, Select **Options>Calendars to display**.
2. Select which calendars you would like to be displayed and press **Sync**.

Technical Specifications

Size and Weight	122.5 x 52 x 13.8mm.	115g with battery
Networks	4G LTE Band 3, 28 LTE Data Rates: 150M Down / 50M Up 3G UMTS 850. HSPA+ 42Mbps data	
Display	2.8" 240 x 320 main screen	
Camera	2MP rear camera with flash. VGA front camera	
CPU & Memory	SC9820E Dual core 1.2GHz CPU 512MB internal storage. Expandable external storage microSD(HC) TM up to 32GB	
Operating system	Proprietary based on Android	
Battery	Capacity	1800mAh Li-ion user replaceable

Charge Time	3-4 hrs with AC Charger
Standby time	Up to 280 hours (subject to network)
Voice talk time	Up to 5 hours (subject to network)
Connectivity	Bluetooth, 3.5mm jack NAHJ, micro USB
SIM Card	Micro SIM, 3FF format.

FAQs & Troubleshooting

Symptom	Solution
How do I check the software version?	Menu > Settings > About phone > Build number
How do I reset to factory defaults?	Menu> Settings > Phone settings >Reset >Factory data reset
How do I configure the MMS Settings?	Messages> Options > Settings> MMS
How do I copy Contacts to or from my SIM card?	Contacts > Options > Import/Export.Choose a method and follow the directions on screen
How do I select Network mode?	Menu > Settings >Wireless & networks > Mobile networks > Preferred network type
How do I manually select a carrier?	Menu > Settings >Wireless & networks >Mobile networks > Network operators > Search networks

Symptom	Solution
How do I enable USB tethering?	Menu > Settings >Wireless & networks >Tethering and mobile hotspot > USB tethering. (Connect as CDROM to install drivers)
How do I configure APN's	Menu > Settings >Wireless & networks >Mobile Networks > Access Point Names > Select (> Add to add a new APN)
How do I enable Flight Mode?	Menu > Settings >Wireless & networks > Flight mode
How do I check Call forwarding etc	Menu > Settings >Call settings > Calls > Call forwarding / Call barring / Call waiting / Caller Id
How do I check for Software Updates?	Menu > Settings > System update
How do I get more technical support?	Visit ztemobiles.com.au or call 1300 789 475 during office house AEST.

Symptom	Solution
How do I change the Ringtone?	Menu > Settings >Sound & notifications > Phone Ringtone
The battery discharges quickly	Possible network coverage issue. Check the signal level. With only 1 or 2 bars, the battery has to work harder to maintain network contact. Limit multi-media to save power. The battery may be worn out.
The handset turns on by itself.	An alarm or calendar event switches the handset on automatically.
No incoming ring or alarm tone	Press the Volume Up key to enable the Ringtone. Check the ringtone and ring volume settings.
The handset switches off after charging.	The handset is charging in the off state. Press and hold the Red key to switch the handset ON.
I cannot charge the phone	Confirm the charger is properly inserted. Remove the battery, clean the contacts and check it is inserted correctly. The battery may be worn out. Tip: Charge the phone using the supplied USB cable.

Symptom	Solution
I cannot connect to other Bluetooth devices	Turn Bluetooth on. Set visibility to Show. Make sure the pass-code is correct. Possible compatibility issues. Not all functionality is supported between different Bluetooth devices and standards.

ERROR MESSAGES

Message	Solution
No SIM Card	Check a valid SIM card is inserted. See the <i>Getting Started</i> section
Enter PIN code	You have set a SIM PIN. Please enter your SIM PIN code.
Enter PUK code	Contact your Service Provider to get the PUK code
Enter Unlock Code	Contact your Service Provider to obtain the network unlocking code.

Disposal of your old phone



1. When the wheelie bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/CE.
2. All electrical and electronic products should be disposed of separately from normal household waste via designated collection points provided by government or local authorities.
3. The correct disposal of electrical and electronic products will help protect the environment and human health.

Australia

Please return your old device to any Mobile Muster collection point or use the Mobile Muster freepost provided with your new handset. Mobile Muster diverts all returned devices from landfill and recycles the component materials.