




Telecom R55

Mobile Phone
Quick Start Guide



1 Start by inserting the SIM card


Insert the (U)SIM card with the gold contacts facing down and the bevelled edge on the top left as shown. Carefully slide it into the housing observing the correct orientation.

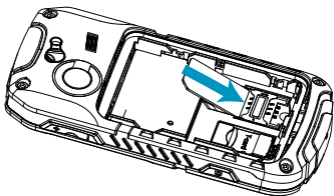

If your handset displays:


Enter Handset unlock code	The default code is 0000
Enter (U)SIM PIN Code	Enter the PIN supplied with your SIM card
No (U)SIM detected	Check the SIM is inserted correctly
Enter PUK code	Contact your Service Provider

2 Then insert the battery

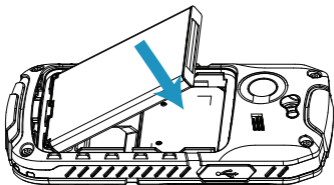

1. Open the battery cover using the thumb notches on the bottom on the cover.
2. Insert the battery as shown with the contacts located against the gold springs.
3. Press the battery down flush into the case.
4. Line the battery cover up correctly, close the case and engage the locking screw.
5. It is important to keep the battery cover, antenna port and USB port cover properly closed to maintain IP67 protection from liquid and dust.

3 Finally switch on your handset

Press and hold the red key  for two seconds to switch the phone ON or OFF.

For more information

There are some additional resources available on line for you to download.

- If you want a full copy of the User Guide please download from the manufacturer's website at <http://zte.co.nz> select your product and go to the Downloads tab.
- You can connect your phone to a computer to create back-ups of your Contacts, save and copy your photos and music files and use other features such as dial up networking. Please download and install the Join Me software from the manufacturer's website at <http://zte.co.nz> select your product and go to the Downloads tab.